



ISO9001

OCEAN®




HZH MARINE GROUP CO.,LTD.

SINGLE DOOR REFRIGERATOR

USER'S OPERATION MANUAL

Refrigerator

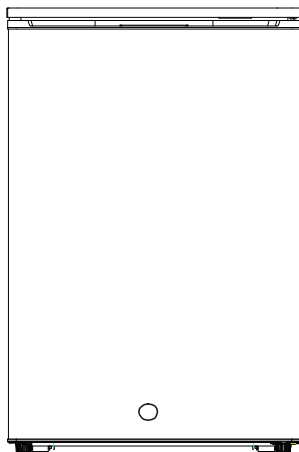

Model: OC-BC50[®] , OC-BC100

HZH MARINE GROUP CO., LTD.

Tel: +86 20 82369196 Email: info@hzhmarine.com

Web: www.hzhmarine.com / www.huazhihang.com

Before operating the unit, please read this manual completely

CAUTION:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Caution: Please unplug the power cord before cleaning the unit.

Warning: If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

WARNING – Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING – Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING – Do not damage the refrigerant circuit.

WARNING – Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Dear customer:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet.

Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

As old refrigerator equipment may contain CFC's which will damage the ozone layer.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal.

This appliance must be only used for its intended purpose.

INSTALLATION

Sighting of the appliance

Place the fridge in a location with a firm base. In order to prevent vibration and noise, the refrigerator must be leveled by adjusting the front feet.

Choose a well ventilated location with no less than 10cm clearance around the refrigerator.

Site the refrigerator away from direct sunlight and heat sources such as an oven or boiler.

For your safety, please read the following information

Warning: This appliance must be earthed.

USE OF THE APPLIANCE

Before plugging in your refrigerator for the first time remove all packing, clean the refrigerator with the lukewarm water and bicarbonate of soda. Wipe dry with soft cloth.

Correct operate and maintenance

1. A 10A safety fuse should be installed on the power supply code, and use a single grounded socket.
2. Don't extent the power code or add other electrical load.
3. Operate the appliance emptily at the first time, turn the temperature knob to "1-4", then the compressor start operating. Keep operating 30 minutes, put hands both onto the outside and inside.

If hot outside and cool inside, that means the appliance work normally.

4. During operation, turn the temperature to mid position. Turn it to the highest position while need freeze.
5. Clean the frost when it reach 3-4mm on the evaporator. This series refrigerators are semi-automatic defrost; need manually press the thermostat knob (as show in the figure). Renewed automatically when finished. The defrost water will drip into the Drip Tray, so pour it after defrost and dry the tray and the inside body.
6. Try not to open the door too often.
7. Don't cool bottle bear or drink in the freezer room, to avoid frost cracking or blasting.
8. Do not store flammable, highly volatile and eroded goods.
9. Do not scratch the evaporator by any sharp substance, for that will broke the evaporator.

10. Disconnect the power bar before cleaning the appliance. Use soft cloth to wipe with warm water or neuter cleaning agent, and then clean it with water.

11. Keep the door gasket clean, on order to maintain well seal.

12. Use soft cloth or soft brush to clean the dust on the compressor and suction tube. Don't wash it by water.

13. Do not use flammable or strong corrosive cleaning agent to clean the appliance.

Addition: Do not wash it by water directly, in order to prevent rust or reduce insulation of the appliance.

Before calling for service

Please check the following points:

- The refrigerator is not working
- Check the plug is inserted correctly into the wall socket
- Check there is power to the wall socket by plugging in another appliance.
- Check the fuse in refrigerator plug.

The refrigerator is noisy when running

Check the refrigerator is level and it is not in contact with another appliance or kitchen furniture.

- The refrigerator does not cool sufficiently

If the door has been opened too often, or it has been left open for a while it will take time for the refrigerator to reach its set temperature.

- Check the airflow the rear of the refrigerator has not been reduced due to insufficient clearance.

The following characteristics should not be looked upon as a problem.

- A gentle tricking sound caused by coolant flowing the pipe.
- Compressor operating at high temperature.

PROLONGED OFF PERIODS.

If the refrigerator is not in use for a long period of time, proceed as follows:

Disconnect the refrigerator from the main supply by removing the plug from the wall socket.

Clean and dry the inside as instructed under the heading of cleaning the fridge.

Leave the door open to prevent any unpleasant smells from building up while the refrigerator is not in use.

After Sales Service

If you experience a problem with your appliance and you require advice please contact the technical helpline.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it

responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.