



ISO9001


OCEAN®

HZH MARINE GROUP CO.,LTD.



USER MANUAL

Model: OCF622D

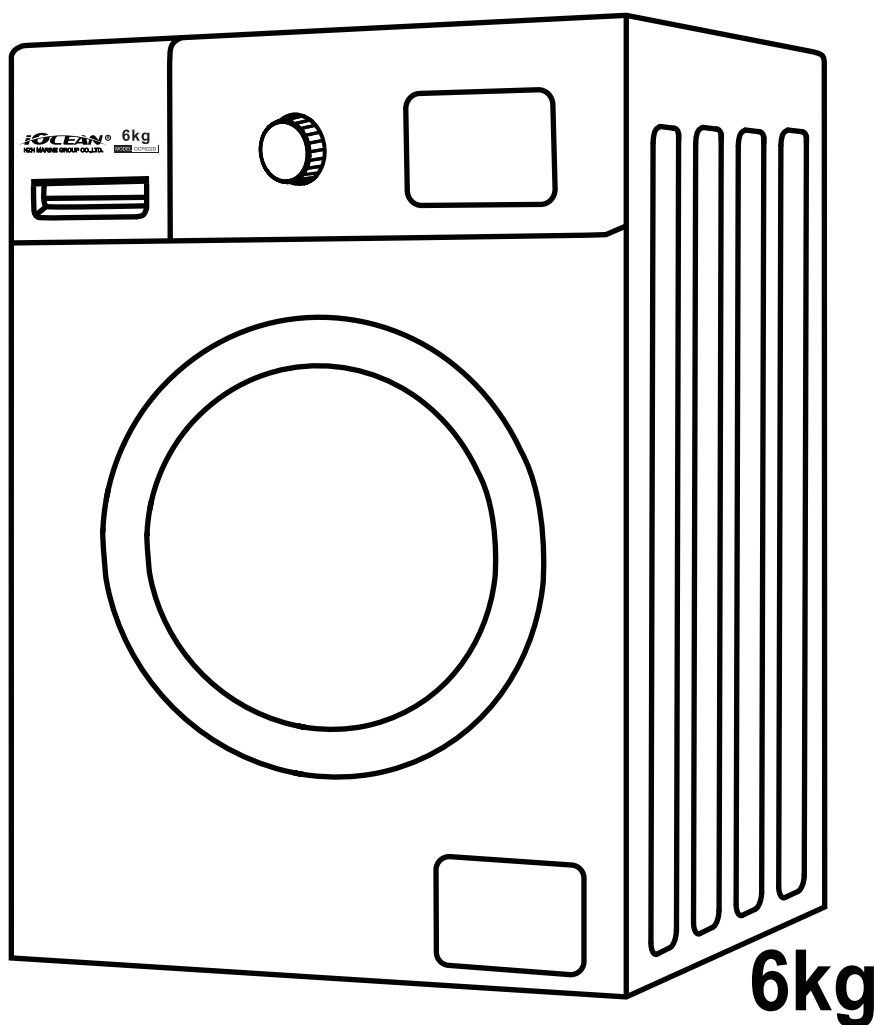

Name: FRONT LOADING WASHING MACHINE

HZH MARINE GROUP CO., LTD.

CONTENTS

PRECAUTIONS-----	2
COMPONENTS NAMES-----	3
INSTALLATION INSTRUCTIONS-----	4
DOOR LOCKING AND UNLOCKING METHODS-----	11
USAGE OF DETERGENT COMPARTMENT-----	11
SAFETY PRECAUTIONS BEFORE WASHING-----	12
FUNCTIONAL DESCRIPTION OF CONTROL PANEL-----	13
DESCRIPTION OF FUNCTIONAL PROGRAMS-----	15
DESCRIPTION OF WASHING PROGRAMS-----	16
MAINTENANCE AND SERVICING-----	17
TROUBLESHOOTING GUIDELINES-----	19
SPECIFICATIONS TABLE-----	21
NAME AND CONTENT OF HAZARDOUS SUBSTANCES USED IN THIS APPLIANCE----	22
AFTER-SALE SERVICE-----	23

PRECAUTIONS

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURE, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

1. Electrical hazard:

- a. Please use a special power socket with good grounding and above 220V ~ 10A.
- b. Please take the plug to insert and pull out the power cord. Do not use damaged power cord. When there is dirt on the plug-in of the power cord, wipe it with a dry cloth in time.
- c. Do not plug or pull the power plug in or out with wet hands.
- d. After use, please unplug the power plug for maintenance or cleaning.

2. Danger of fire or electric leakage:

- a. Do not let the washing machine close to the fire source, or put lighted cigarettes, candles and volatile materials on the washing machine.
- b. Please do not spill water directly on the washing machine control panel.
- c. Please don't put the washing machine in the place with serious water and moisture.
- d. Please fix the drain pipe before use, and make sure that the sewer is not blocked.

3. Risk of burns due to high temperature:

- a. When washing at high temperature, the door glass will get hot. Please do not touch the door glass, especially children.
- b. When the door needs to be opened in high temperature washing, please wait until the temperature drops to the safe temperature and the door lock is automatically unlocked.

4. Risk of personal injury:

- a. Please handle the disassembled package in time. Do not let children touch or swallow it.
- b. Children are not allowed to operate or climb onto the washing machine to play.
- c. Please close the door when the washing machine is not in use to prevent children from entering the washing barrel.

5. Risk of damage to washing machine:

- a. Please don't put heavy objects on the washing machine.
- b. Two people are required to move or handle the washing machine.
- c. Please do not let non professionals repair or modify the machine.

6. Risk of damage to clothing:




- a. Please do not wash waterproof clothes, such as raincoats, down products, sleeping bags, etc.
- b. Only machine washable clothes can be washed. If in doubt, please follow the washing guide on the clothes.


7. Risk of explosion:

- a. Do not wash or dehydrate the clothes stained with kerosene, gasoline, diluent and other flammable materials.
 - b. Do not operate the washing machine when the gas leaks.
8. When the power plug is pulled out, the door lock can be opened even if the water level in the barrel is high. Therefore, in any case, please confirm the water level in the barrel before opening the door. If the water level is high, please do not open the door to avoid unnecessary loss caused by water overflow.

COMPONENTS NAMES

Description of accessories

Use manual	Inlet hose	Transport screw hole plug (4pcs)
		

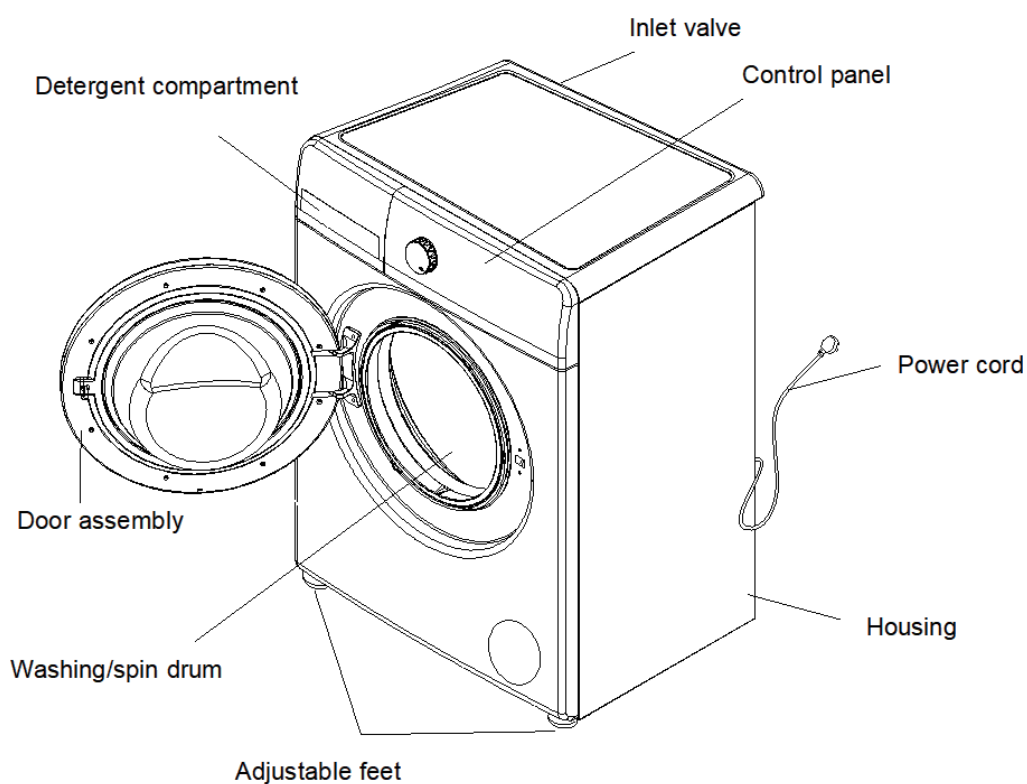

The figure above is only for reference!

Notes:

1. When washing clothes for the first time, some water may flow from the washing machine. This is what is left during the performance test at the factory. This phenomenon is normal.
2. After using, please pull out the power plug, turn off the faucet to prevent unexpected flood and fire.

INSTALLATION INSTRUCTIONS

- The environmental temperature of places to install or place the washing machine shall not be below 0 °C. Do not install or place the washing machine outdoors.
- Follow management practices and regulations to correctly place the washing machine.
- When the washing machine is installed on a floor with a carpet, do not block the ventilation orifice of the base.
- There are many insects in the countryside. Please keep the surroundings of the washing machine clean. The warranty does not cover any damage caused by cockroaches or other insects.

Shipping bolts

The shipping bolts are used to prevent internal damage of the washing machine during transport.

Disassembling the shipping bolts

1. Open the package, remove the packaging base and move the washing machine to the installation place.
2. Disassemble the 4 shipping bolts, rubber pads and plastic rods (see Figure 1). If the shipping bolts are not disassembled, they may cause intense vibrations, noise and faults. The shipping bolts shall be installed every time before the washing machine is transported.
 1. Use the supplied plastic plugs to cover the four holes. (see Figure 2).

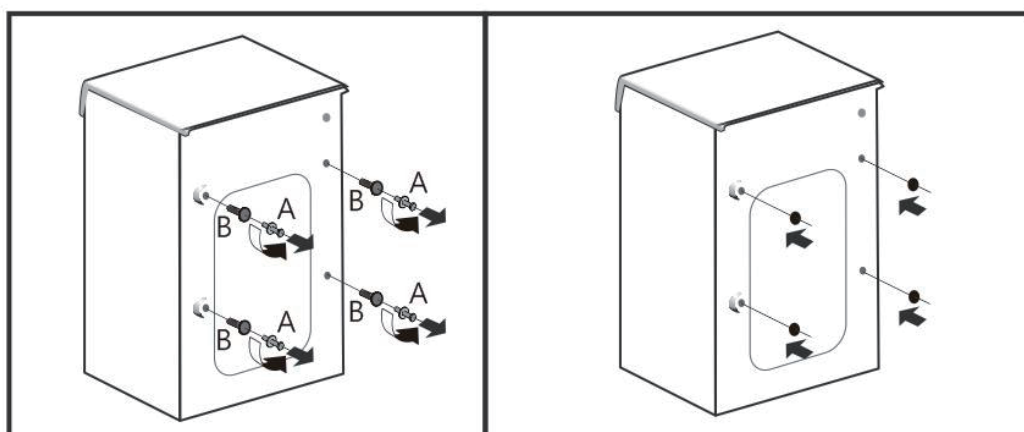


Figure 1

Figure 2


Requirements for installation place

Horizontal adjustment:


- The tilt angle shall not exceed 1 degree. Power outlet:
- Do not connect to a number of power plugs.

Installation place:

- Allow sufficient safety distance between the washing Machine and the wall. (distance between the back/left/right of the washing machine and a wall >2cm)

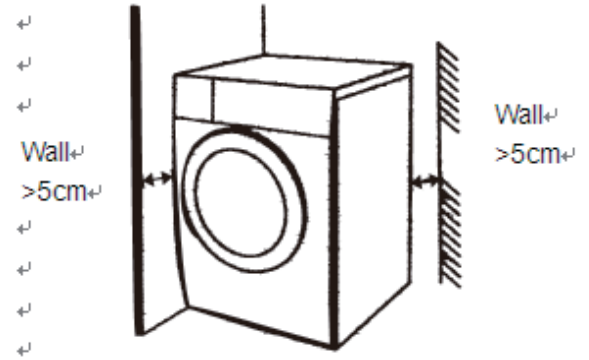

- Install the washing machine at a hard and flat floor with a drain. Do not install it on soft carpeted or wooden floors.
- Do not put clothes to be washed or other objects at the worktop of the washing machine because they will affect the running of programs.

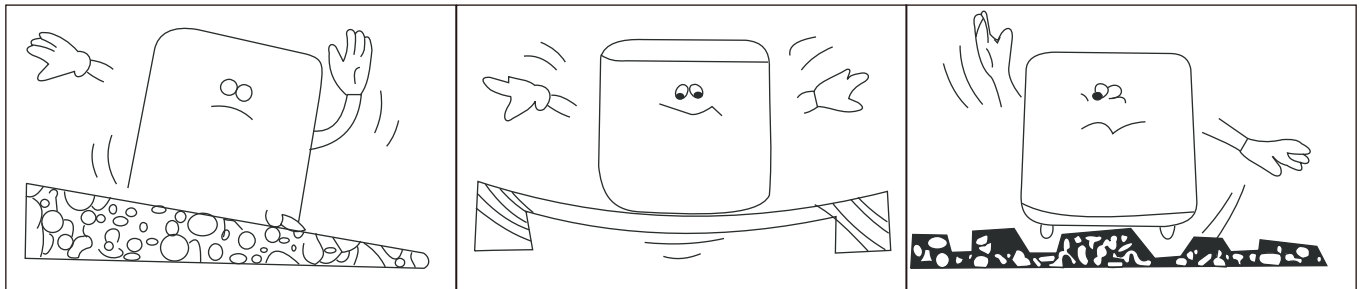

NOTES

Connecting the power supply

1. Do not use a power strip or power strip bar.
 2. If the power cord is damaged, please contact professional persons to repair it to avoid injuries.
 3. After using, please unplug the power plug and turn off the faucet.
 4. Connect the power cord of the washing machine to a grounded power outlet and follow the wiring rules.
 5. The washing machine shall be installed at a place where it can connect to the power outlet easily.
- The washing machine shall be repaired by professional persons. Non-professional persons may damage the washing machine seriously or cause serious faults during repair, please contact the local repair center.
 - Do not place the washing machine at a place whose surrounding temperature may be below 0 °C because water pipes will be frozen and broken and the program controller will

be damaged at the temperature below 0 °C.

- If the washing machine is handled in winter at the temperature below 0 °C, please place it at room temperature several hours before using.

Connecting the power supply

- The washing machine must have a grounding device. The grounding device can reduce the danger of electric shocks in case of a failure. This device has a grounding line (a conductor with a grounding plug). The grounding plug must be inserted into an appropriate power outlet.
- Please contact professional persons to test whether or not the washing machine is grounded correctly. If the power outlet and the power plug do not match, please do not change the power plug.
- If the washing machine smokes or emits a peculiar smell, please cut off the power supply and contact professional persons.



To ensure quality, the washing machine is filled with water for testing at the factory, water may remain in the interior of the drum, the door seal and the door glass, and this is a normal condition.

Connecting the water supply hose

1. The water supply pressure shall be from 50kPa to 850kPa.

2. During connection of the water supply hose and the inlet valve, do not screw them tightly to avoid slipping.




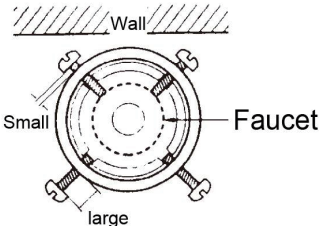

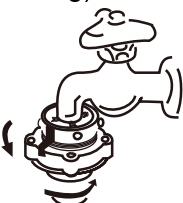
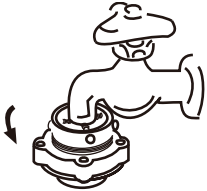

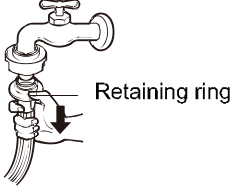
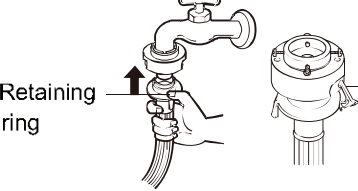
- There are 2 seal rings in connectors at both ends of the water supply hose to prevent water from leaking.
- Turn on the faucet to check the connectors for any water leakage.
- Check the water supply hose regularly and replace it if necessary.
- Make sure that the water supply hose is not warped or damaged.

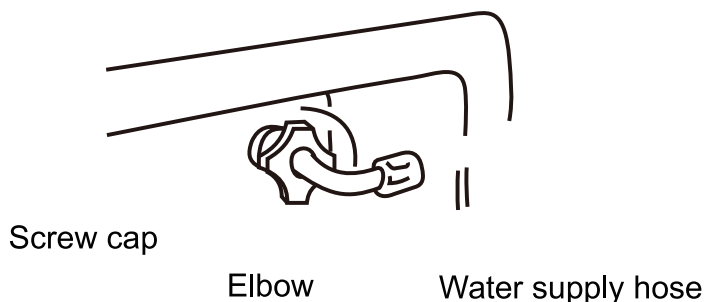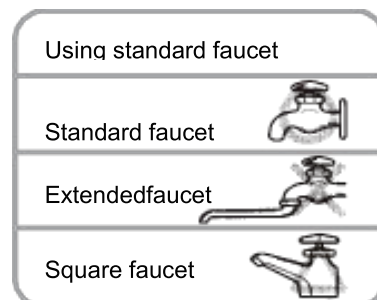

NOTES

Use the new hose assembly that comes with the washing machine. The old hose assembly cannot be reused.

Connection of water supply hose to faucet

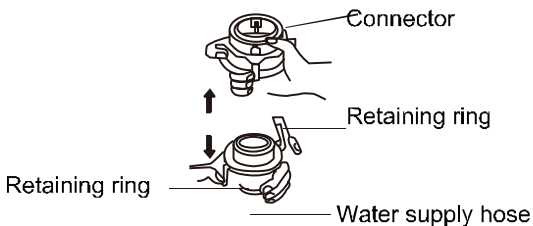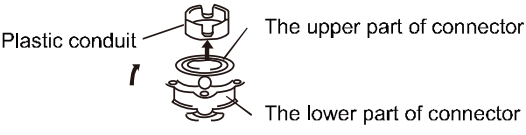
<p>1. Hold the connector with one hand, press the retaining ring with the other hand and pull it down to separate the connector from the water supply hose.</p> 	<p>Loosen the four mounting screws on the upper part of the connector, and rotate the lower part of the connector to leave a distance enough (equal to the height of 3 threads) for installing screws between the upper part and the lower part of the connector.</p>  <p> Plastic conduit the upper part of connector The lower part of connector</p>
<p>3. Adjust the four screws of the connector evenly so that two screws near the wall are fully in contact with the exterior of the faucet first.</p>  <p> Screw near the wall can be screwed several threads in advance.</p>	<p>4. Hold the upper part of the connector against the mouth of the faucet so that the seal ring in the connector is fully in contact with the faucet (please do not take out the seal ring).</p>  <p>Please choose standard faucet, faucet mouth must be smooth. If it is uneven, file it.</p>
<p>5. Rotate two screws (see figure) opposite to the wall so that they are in contact with the faucet, and screw them with a screwdriver tightly.</p> 	<p>6. Rotate the lower part of the connector to screw it tightly (or else, water may leak from the connection). After rotation, the clearance between the lower part and the upper part of the connector shall be lower than 3mm.</p>  <p>Mark for clearance lower than 3mm</p>
<p>7. To remove the water supply hose, please press the retaining ring of the water supply hose.</p> 	<p>8. To install the water supply hose, please turn the retaining ring of the water supply hose back to release it.</p>  <p>Make sure that the retaining ring is on the connector</p>

9. Check whether or not the lower part of the connector and the water supply hose are connected firmly.


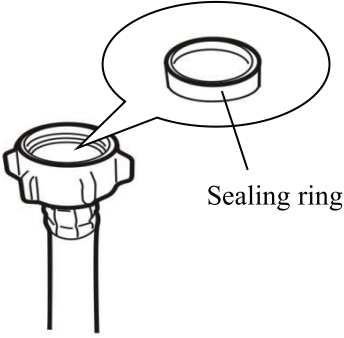

- Screw the connector of the water supply hose and the inlet valve tightly. Slowly turn on the faucet to check for water leakage.
- If water leaks from the connection, please turn off the faucet and assemble them again. (Water may leak from the connection if the upper part of the connector is not assembled correctly or the upper part and the lower part of the connector are not screwed on tightly.)
- After using for a long time, the connection may be loose. Then, please assemble parts again by following steps 1-9. (If it is necessary to assemble the connector of the water supply hose after a move, please follow steps 1-9 too.)

NOTES:

If a special faucet shown in the figure below is used, please take the following steps to assemble the parts:

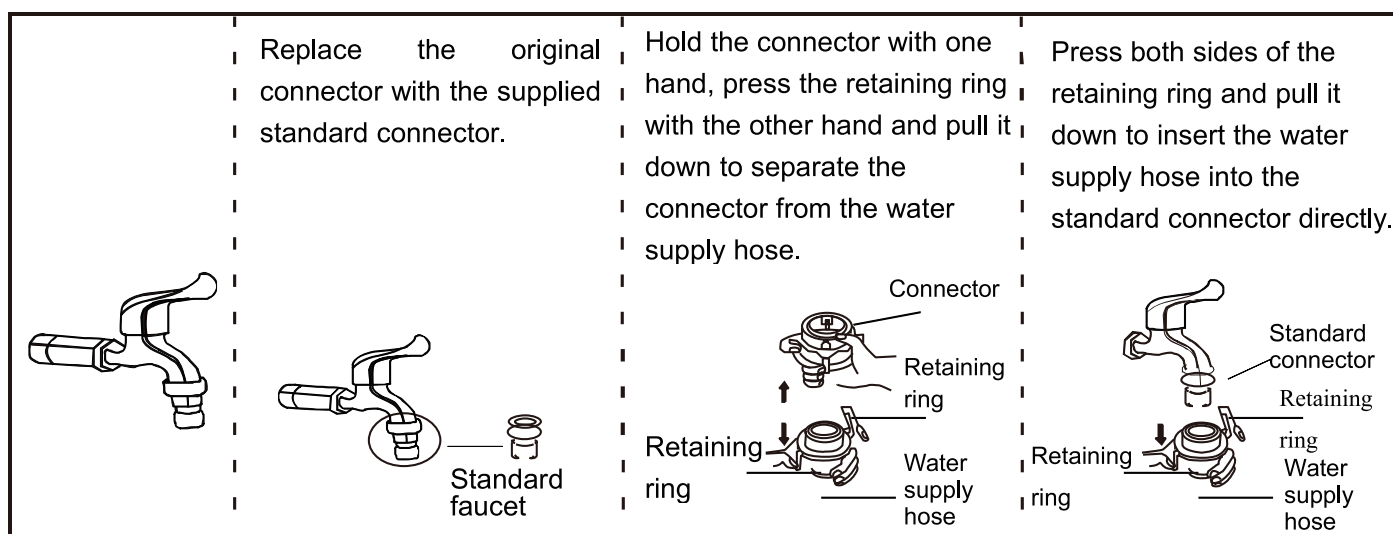


If the faucet with threaded port shown in the figure below is used, please follow the steps below for installation:

<p>Tap with threaded port</p> 	<p>Ensure that the gasket in the water inlet hose connector is installed smoothly.</p> 	<p>Align the water inlet hose connector with the faucet as shown in the figure, and tighten the nut on the water inlet hose in the direction shown in the installation figure.</p> 
---	--	--

- The washing machine is designed for home use only. Do not use it on ships, travel trucks or airplanes.
- If the washing machine will be not used for a long time (such as vacations), please turn off the faucet.
- When the washing machine is placed, please unplug the power plug, cancel the lock function to prevent children being trapped inside the washing machine through misuse.
- Packaging materials (such as films and foams) can be dangerous to children, and may cause suffocation! Notes: Keep all packaging material out of the reach of children.


Installing the drain hose

- To ensure normal operations of the washing machine, the inner diameter or width of the end of the drain hose to be inserted into the sewer shall be no less than 4cm.
- The height of the outlet of the drain hose shall be within a certain range. For specific data, please refer to the figure below.

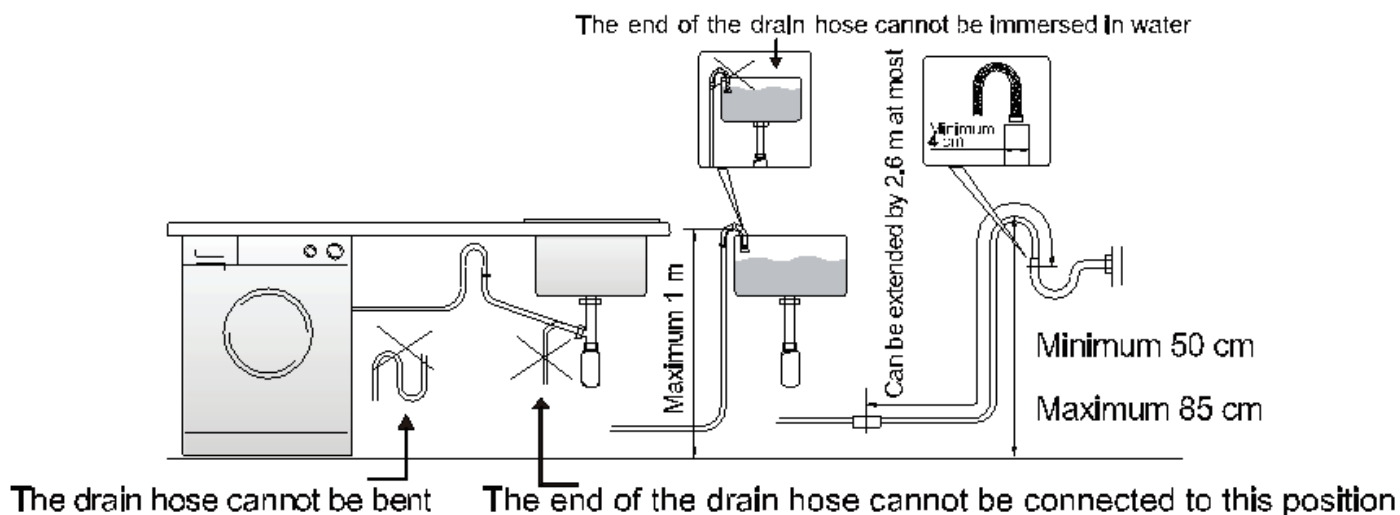

Horizontal adjustment

- Adjust the level of the washing machine to avoid additional noise and vibrations. Install the washing machine on a hard and horizontal floor (the corner of a room is preferred).
- If the floor is not flat, please adjust the adjustable feet. (Do not insert objects such as wood chips under the adjustable feet). Make sure that the four adjustable feet are in contact with the floor firmly and check that the washing machine is horizontal. (Using a spirit level is allowed).
- Adjust the adjustable feet so that the washing machine is flat and stable on the floor. After position adjustment, screw the locknuts tightly to keep the washing machine stable.
Do not place the washing machine on a table on the floor to prevent it from falling accidentally.
- When pressing any position on the diagonals of the worktop of the washing machine, the washing machine cannot shake. (Check on both diagonals. If the washing machine still shakes, please adjust the adjustable feet again.)

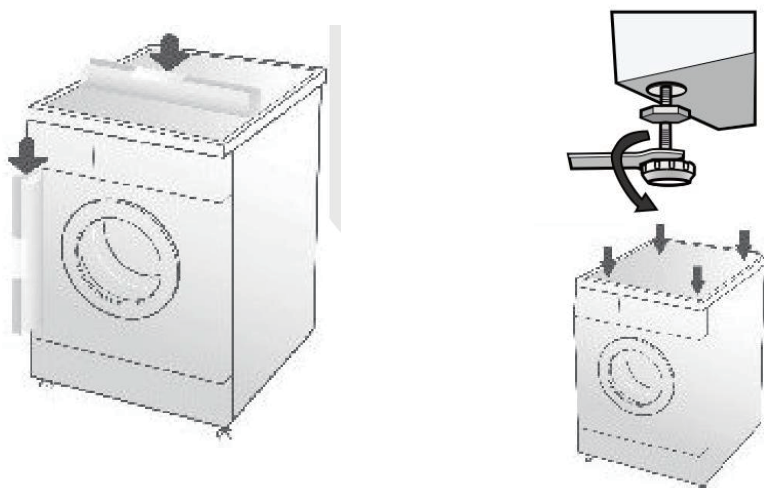

DOOR LOCKING AND UNLOCKING METHODS

Door locking

After startup, the door will be locked automatically and cannot be opened.

Door unlocking

- Press the “Start/Stop” button when the door lock is locked. After the washing/spin drum stops rotating, wait for 2 minutes until the door is unlocked automatically.
- Foams may rise from the drum during washing. Please catch them with a towel.
- During washing, the door cannot be opened at high temperature.
- During washing, the door cannot be opened with high water level.

USAGE OF DETERGENT COMPARTMENT

Multi-squared detergent compartment

Liquid detergent—bleach


- Please use synthetic low-foam liquid detergents.
- If concentrated liquid detergents are used, please dilute them with water (2:1) and pour them into the detergent compartment.

Clean the detergent compartment in advance

- If the clothes are very dirty, please add appropriate detergents after selecting the pre-wash function. (The quantity of detergents varies with models)

Fabric Softener


- Add softeners before washing. The washing machine will automatically inject softeners into the drum during the final rinse.
- If concentrated softeners are used, please dilute them with water appropriately and evenly and pour them into the detergent compartment.
- Do not exceed the "Max" line.

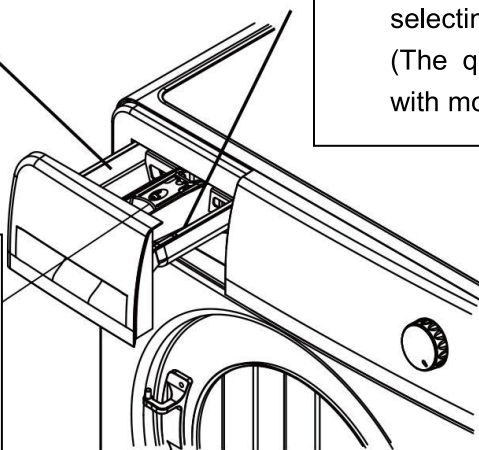

Single-squared detergent compartment

Liquid detergent—bleach

- Please use synthetic low-foam liquid detergents.
- If concentrated liquid detergents are used, please dilute them with water (2:1) and pour them into the detergent compartment.

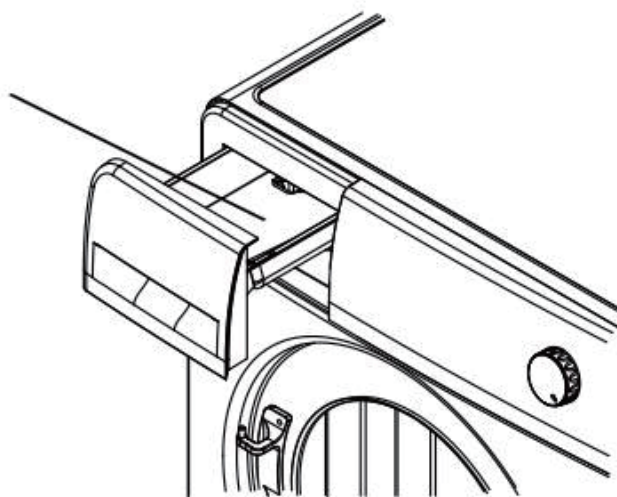

- Use detergents made specially for drum washing machines.
- Do not use too much detergent, or too much foams may affect the rinse effect or cause functional faults.
- Please follow the instructions of the manufacturer to use detergents by the kinds and colors of clothes, water temperature, degree of staining, etc.
- Using appropriate detergents has good washing effect and is beneficial for environmental protection.

SAFETY PRECAUTIONS BEFORE WASHING

1. Care label

- Read the care labels of clothes. The kind, materials and washing method of a cloth are printed on a care label.

2. Wash by kinds of clothes

- To obtain the best washing effect, only wash one kind of clothes in a washing period.
Water temperature, spin speed and programs vary with clothes. Dark clothes shall be washed separately from light and white clothes. Dyed clothes and cotton velvet clothes shall be washed separately, or the white clothes may be stained. If possible, do not wash very dirty clothes with moderately dirty clothes.

- | | |
|---|---|
| <ul style="list-style-type: none">● Degree of stains (Severe, moderate, minor)● Color (White, light, dark) | <ul style="list-style-type: none">● Wash by kinds of clothes and degree of staining● White clothes shall be washed |
|---|---|

- Cotton velvet (clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets)

separately from colored clothes.

- Clothes whose cotton velvets are easy to drop out and clothes easy to adhere to cotton velvets



Check whether or not the clothes are machine-washable



For clothes whose buttons or accessories are easy to be damaged during washing, please wash inside out



Remove dust and silt from clothes before washing



Take out objects such as keys, hairpins, pins and coins from pockets





Put delicates into a laundry bag before washing



Wash clothes with oil stains or clothes that are easy to fade separately

FUNCTIONAL DESCRIPTION OF CONTROL PANEL

OCF622D

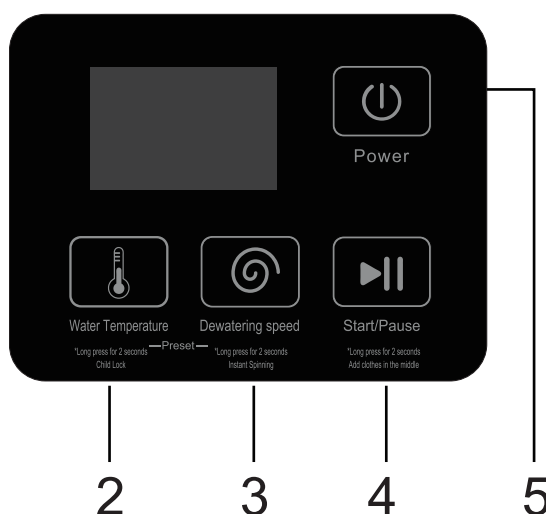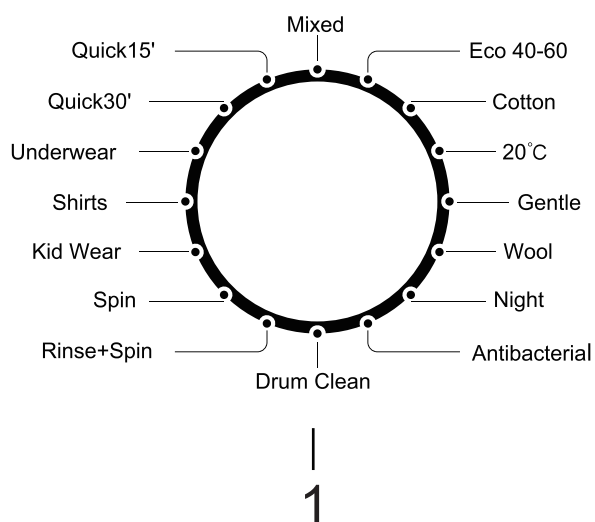

1. PROGRAM KNOB

Select the appropriate procedure according to the type of washing clothes and the degree of stains.

2. “TEMP” BUTTON

- Select the water temperature by the kinds of clothes and degree of staining.
- The range of water temperature varies with programs. In some programs, water temperature cannot be selected.
- Press and hold down this button for more than 2 seconds to turn the mute function on/off. After setting the child lock function, except for the "Power" button, other buttons do not work.

3. “SPIN SPEED” BUTTON (Only applicable to 16 series products)

- Select the spin speed according to the amount of clothes and the type of clothes.
- The setting range of spin speed is different due to different programs.
- Plug in power, press and hold down this button for 2 seconds to enter the "Spin" program before starting the machine.

4. “START/PAUSE” BUTTON

- Press this button to start or stop the washing procedure.
- During operations, press this button to stop a program temporarily, and press it again to restore this program.
- Press and hold down this button for 2 seconds to open the door temporarily for adding clothes during operation. As the door lock of the machine has a protection function, you have to wait about 2 minutes to open the door (Only applicable to 16 series products).

5. "POWER" BUTTON

- Press this button to turn on or turn off the power.
- Press this button to turn on the power supply. If it is not operated, it will turn off automatically after 1 minute.

6. "PRESET" BUTTON (Only applicable to 16 series products)

Press "Water Temperature" and "Spin Speed" buttons at the same time to enter the preset function.

Press once to select the starting time of the machine in 1-24 hours in increments of 1 hour each time.

The preset time shall be selected after selecting the required program and before pressing the "Start/Pause" button.

DESCRIPTION OF FUNCTIONAL PROGRAMS

Washing usage of clothes

1. Prepare for washing

- Open the door, add clothes to the drum, and close the door.
- Withdraw the detergent compartment, add detergent and fabric softener, and close the detergent compartment.
- Connect the water supply hose, and make sure that the faucet is turned on.

2. Press the "Power" button to power on.

3. Select a program in the following order with the program selection knob as needed:

4. Press the "Start/Pause" button to start washing.

5. After washing is ended:

- The LED on the panel flashes or the display shows "END" and the washing machine gives a buzzing sound. It will turn off automatically after 1 minute.
- Open the door to take out the clothes.
- Unplug the power plug and turn off the faucet.

Usage of self programs

1. Prepare for washing

- Open the door, add clothes to the drum, and close the door.
- Withdraw the detergent compartment, add detergent and fabric softener, and close the detergent compartment.

- Connect the water supply hose, and make sure that the faucet is turned on.
2. Press the "Power" button to power on.
 3. Turn the program knob to select the desired program.
 4. Press the "Water Temperature" button to set the water temperature.
 5. Press the "Spin Speed" button or "Water Temperature" and "Spin Speed" buttons to set the dehydration speed and rinsing times (Only applicable to 16 series products).
 6. Press the "Start/Pause" button to start washing.
 7. After operation is ended, the buzzer sounds.
 - The LED on the panel flashes or the display shows "END" and the washing machine gives a buzzing sound. It will turn off automatically after 1 minute.
 - Open the door to take out the clothes.
 - Unplug the power plug and turn off the faucet.

DESCRIPTION OF WASHING PROGRAMS

Program	Water temperature (°C)	Rinse (times)	Maximum load	Kind of clothes
Mixed	40/20	2	≤4kg	Cotton/Synthetic fabrics
Eco 40-60	/	2	Rated	Dirty Cotton/Synthetic fabrics
Cotton	40/60/85/20	2	Rated	Common cotton fabric
20°C	20	2	≤3kg	Lightly soiled cotton laundry
Gentle	40/20	2	≤3kg	Cotton/Synthetic fabrics
Wool	20	2	≤3kg	Machine-washable wool fabrics
Night	40/60/20	2	≤4kg	Cotton + linen/ Synthetic fabrics
Antibacterial	85	2	≤4kg	Cotton fabrics needing and mite killing and sterilization
Drum Clean	85	2	/	Cleaning and sterilization of washing machine
Rinse + Spin	/	1	Rated	Cotton/Synthetic fabrics
Spin	/	/	Rated	Cotton/Synthetic fabrics
Kid Wear	60/85/20/40	3	≤4kg	Cotton fabrics needing simple cleaning and odor removal
Shirts	40/20	2	≤4kg	Cotton/Synthetic fabrics
Underwear	40/60/20	2	≤3kg	Cotton/Synthetic fabrics
Quick30'	20	2	≤2kg	Not very dirty clothes/frequently used towels

Quick15'	20	2	≤2kg	Not very dirty clothes/frequently used towels
----------	----	---	------	---

Notes:

1. The first parameter of water temperature is the default parameter at startup. You can select other parameters manually.
2. The running time of the program will change when the water pressure, drainage conditions, clothing material, clothing weight and water temperature change, so the running time is different each time. This is normal.
3. When the washing machine starts up after a power failure, it runs from the time node before the power failure.

MAINTENANCE AND SERVICING

- After using for a long time, please service the washing machine immediately. Good servicing practices may extend the service life of the washing machine.
- Before servicing, please unplug the power plug to avoid dangers from happening.

Housing

Please wipe the body with a soft and clean cloth every time after the washing machine is used. When there are serious stains, please wipe the body with a cloth dipped in appropriate detergents or soapy water.


- Do not spray water on the body directly.
- Do not wipe the body with chemicals such as putty-powder, diluting agents, gasoline and alcohol.

Door seal

Please wipe stains and foreign matters such as thread chips away with a towel every time after using. If there are foreign matters such as pins in the groove of the door seal, please take them out.


Cleaning the detergent compartment

- To prevent detergents becoming moldy on the wall of the detergent compartment, please clean the detergent compartment regularly.
- Press the specified position and pull out the detergent compartment, wash it with water and put it back.

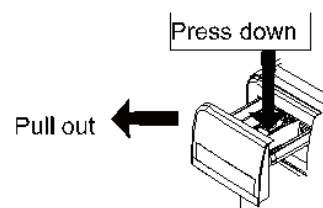

If the washing machine is frozen

1. Wrap the faucet and the universal coupling with a hot towel.
2. Remove the water supply hose and immerse it in hot water at the temperature of approximately 50°C.
3. Pour 2~3 liters of hot water at the temperature of approximately 50°C into the drum.
4. Connect the water supply hose again, turn on the faucet, start up the washing machine, and check whether or not the water supply and drainage are normal.

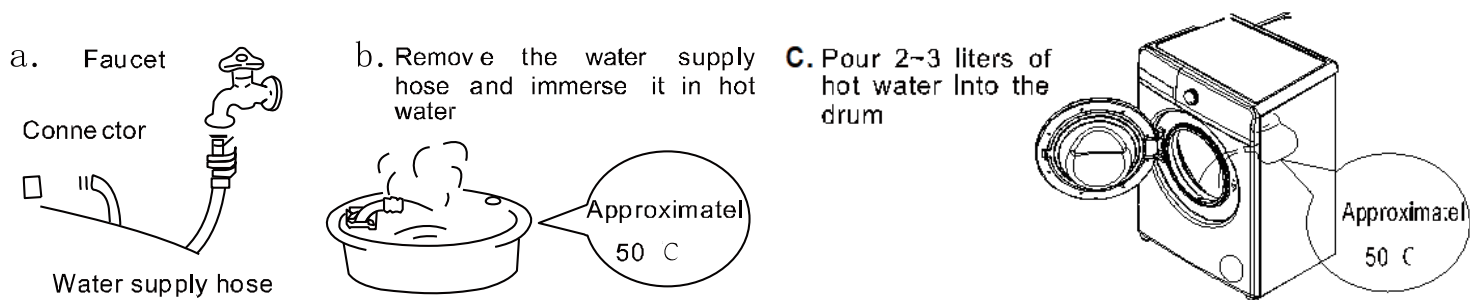


Self-cleaning of drum (once a month is recommended)

After using for a long time, there may be stains in the washing drum. The self-cleaning program can be used to clean the exterior and the interior of the drum.

Notes: During self-cleaning, do not add clothes or detergents.


Cleaning the universal coupling (once every six months is recommended)

1. Remove the water supply hose from the universal coupling.
2. Screw off the fastener by following the arrow.
3. Rinse the interior of the fastener with water.
4. Install the clean fastener and the water supply hose.

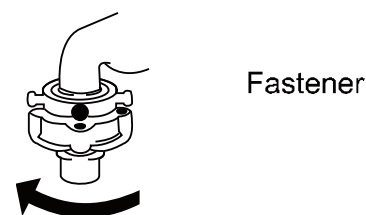

Cleaning the inlet valve (once every six months is recommended)

1. Remove the water supply hose from the washing machine.
2. Take out the filter screen from the inlet valve.
3. Clean the filter screen thoroughly with a toothbrush or similar tools.
Install it to the inlet valve.
4. Connect the water supply hose again.

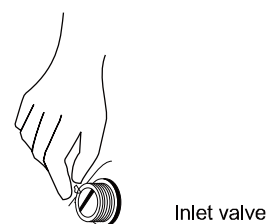


Cleaning the filter of the drainage pump (once a month is recommended)


1. After drainage, disconnect the power plug, press the clip above the decorative cover for the drainage pump at the right corner in the front of the body, and open the filter cover. (Note: if there is hot water in the washing machine, please take the above actions only after cooling.)
2. Screw off the filter anti-clockwise.
3. Rinse the filter thoroughly with water.
4. Insert the filter, screw it clockwise and close the decorative cover for the drainage pump.



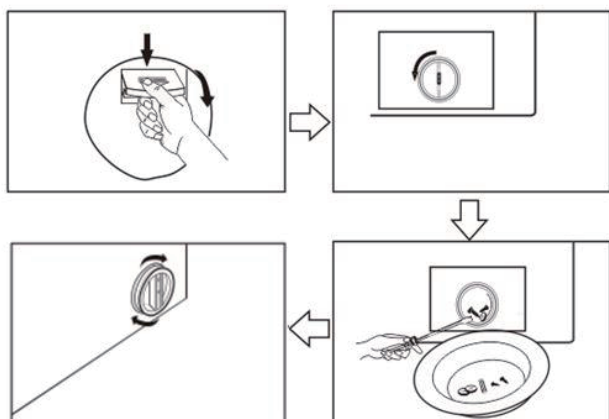

Notes:

- a. The filter must be tightly screwed to prevent water from leaking.
- b. Do not clean the filter when a program is running.



TROUBLESHOOTING GUIDELINES

Symptoms 16P series	Symptoms 17P series	Check points	Solutions
The washing machine cannot start	The washing machine cannot start	<ul style="list-style-type: none"> Is the “Power” button or “Start/Pause” button pressed? Is the plug of the power cord pulled out? Is there a power failure? Is the leakage protector broken? 	<ul style="list-style-type: none"> Press the “Power” button or “Start/ Pause” button. Insert the plug of the power cord. Please wait. Turn on the leakage protector.
Abnormal spin	Abnormal spin	<ul style="list-style-type: none"> Are the shipping bolts disassembled? Is the washing machine assembled firmly? Are there single small clothes in the drum? Are the locknuts for the adjustable feet screwed tightly? 	<ul style="list-style-type: none"> Disassemble the shipping bolts. Put the washing machine on a flat and even floor. Add several similar clothes. Screw locknuts tightly.
Water inlet fault displays “E01”	Water inlet fault displays 	<ul style="list-style-type: none"> Is the faucet turned off? Is there a water outage or is water pressure lower? Is the water supply hose frozen? Is the water supply hose or the inlet valve blocked? 	<ul style="list-style-type: none"> Turn on the faucet. Please wait. Unfreeze the water supply hose with hot water. Take the filter screens out from the water supply hose and the inlet valve and thoroughly clean them.

Drainage fault displays "E03"	Drainage fault displays 	<ul style="list-style-type: none"> ● Is the height of the drain hose too high? ● Is the drain hose frozen? ● Is the drain hose blocked by foreign matters? ● Is the floor drain blocked by foreign matters? 	<ul style="list-style-type: none"> ● Please put the drain hose well and make sure that the height is below 1m. ● Unfreeze the drain hose with hot water. ● Take the foreign matters out and empty the drain hose. ● Remove foreign matters from the floor drain.
Door fault displays "E02"	Door fault displays 	Make sure whether or not the washing machine starts when the door is not closed tightly?	Close the door tightly.
No heating fault displays "E06"	No heating fault displays 	Turn off the faucet and disconnect the power plug. Then, contact professional maintenance personnel	
Continuous water inflow fault displays "E04"	Continuous water inflow fault displays 	Turn off the faucet and disconnect the power plug. Then, contact professional maintenance personnel	
Too many foam	Too many foam	Are low-foam detergents special for drum washing machines used?	It is recommended to add the appropriate detergents.
<p>Notes:</p> <ol style="list-style-type: none"> 1. ● - Indicates the light off state; ◎ - indicates flashing state; ⊙ - indicates the normally on state. 2. When a fault occurs, only the corresponding indicator light or display screen will forcibly flash and beep, indicating that the current machine is in a fault state. 3. When the model without display screen (17P series) gives an alarm, the four temperature indicators in the left row flash and beep at the same time. 			

Notes: the following conditions do not represent faults

The door cannot be opened	<ul style="list-style-type: none"> ● A program is running.
Peculiar smell	<ul style="list-style-type: none"> ● Because rubber parts are used in the washing machine, there can be a rubber smell at the beginning.
Low water quantity during washing and rinsing	<ul style="list-style-type: none"> ● Drum washing machines wash clothes with a liter of water.
Water inflow during running of programs	<ul style="list-style-type: none"> ● If the water level decreases, the washing machine automatically replenishes water.
Drainage during washing	<ul style="list-style-type: none"> ● Are too many or high-foam detergents added?
Variation of remaining time	<ul style="list-style-type: none"> ● During spinning, if the clothes are off center, the spin time will increase appropriately to correct this phenomenon. ● If the water pressure is too low, the inflow time will increase appropriately.

Model	OCF622D
Rated voltage	220V 60Hz
Rated washing capacity	6kg
Rated spin capacity	6kg
Rated washing power	250W
Rated spin power	250W
Rated heating power	1800W
Maximum power	1900W
Washing noise	62dB(A)
Spin noise	75dB(A)
Water pressure	0.05-0.85MPa
Overall dimensions (mm)	598×445×845

NAME AND CONTENT OF HAZARDOUS SUBSTANCES USED IN THIS APPLIANCE

Component names	Hazardous substances					
	Plumbum (Pb)	Hydrargyrum (Hg)	Cadmium (Cd)	Hexavalent chromium Cr (VI)	Polybrominated biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Door lock	×	○	○	○	○	○
Computer board	×	○	○	○	○	○
Power cord	○	○	○	○	○	○
Bolt and nuts	○	○	○	○	○	○
Water level sensor	○	○	○	○	○	○
Draining Valve	○	○	○	○	○	○
Motor	×	○	○	○	○	○
Belt, pulley	○	○	○	○	○	○
Door assembly	○	○	○	○	○	○
Top cover assembly	○	○	○	○	○	○
Control panel components	○	○	○	○	○	○
Housing	○	○	○	○	○	○
Inner barrel	○	○	○	○	○	○
Base	○	○	○	○	○	○
Detergent box	○	○	○	○	○	○
Inner and outer washing barrel	○	○	○	○	○	○

Notes:

1. This table is compiled according to SJ/T 11364.
2. ○: It indicates that the contents of this hazardous substance in all homogeneous materials used for this component are below the limit specified in GB/T26572.
3. X: It indicates that the contents of this hazardous substance in at least one homogeneous material used for this component is above the limit specified in GB/T26572.



The “environment-friendly use period” of this appliance is 10 years, and it is specified by this enterprise according to the design characteristics of this appliance. This “environment-friendly use period” is valid only when this appliance is used normally by following this Owner’s Instructions.

AFTER-SALE SERVICE

Three years warranty service is available from the date of purchase. The date of purchase of the invoice or after-sales service warranty card is subject to the warranty service. The problems you encounter when using our company's home automatic washing machine can be helped and resolved through the service hotline. We provide technical advice free of charge.

●One of the following conditions is not covered by the warranty:

- 1) Components are damaged due to improper use, maintenance and storage.
- 2) Damage caused by disassembly and assembly of products without the maintenance personnel of the company or designated special maintenance personnel.
- 3) No purchase invoice, or purchase invoice does not match the product.
- 4) Damage caused by force majeure.
- 5) Exceeding the warranty period.
- 6) This product is an ordinary household washing machine. For commercial or collective washing machines, such as hotels, hair salons, laundries, factories and dormitories, the warranty period is six months. Beyond the warranty period, our company will charge for maintenance according to the relevant regulations of our company.

★ If you find any quality problems, please contact the service center or special maintenance service point for repair. Do not disassemble it yourself. The company will not bear any responsibility for quality problems or accidents caused by self-disassembly.

★ If the product is not under warranty, the company will charge for maintenance according to the relevant provisions of the company on after-sales service. Donlim Weili Electrical Appliances Co., Ltd. reserves the right of final interpretation of the above commitments.

HZH MARINE GROUP CO.,LTD.

Tel: +86 20 82369196 Email: info@hzhmarine.com

Web: www.hzhmarine.com / www.huazhihang.com